


## REMOTE START QUICK REFERENCE GUIDE

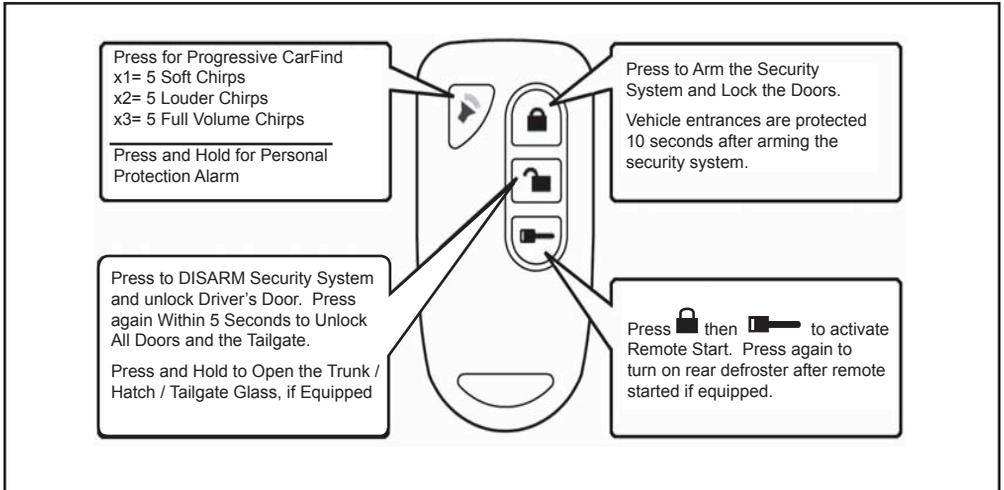

### Using the Remote Start Function

#### Using Valet/Service Mode

Service mode is used when servicing the vehicle to prevent the system from unexpectedly starting the engine while being serviced. While in service mode, the system's keyless entry functions will operate normally, but the security system will not arm and the remote start function is temporarily disabled. **The system will honk the horn 2 times if an attempt is made to activate the remote start system.**

**To Engage Valet/Service Mode;** turn the ignition key to the ON or RUN position and press and hold the  button for 2 seconds on the remote control transmitter.

**To Exit Valet/Service Mode (Return the system to its normal operating mode);** turn the ignition key to the ON or RUN position and press and hold the  button for 2 seconds on the remote control transmitter.

**Important Note:** When taking your vehicle to the dealer for service, it is recommended that you inform the service personnel that your vehicle is equipped with a remote control start system.

## TRIP ID


The trip ID feature will let you know what entry point caused the security system to trigger while you were away from your vehicle. After disarming the system, enter the vehicle and press the override/programming button (located on the driver's side, secured to the remote start wire harness) before turning on the ignition key. The horn will honk a number of times to indicate which entry point, in the chart to the right, triggered the alarm.

TRIP ID Chart	
Chirps	Entry Point
2	Door
3	Hood or Brake
4	Trunk/Tailgate
5	Ignition was turned on

## Emergency Override Procedure

Use this procedure if your remote control transmitter is lost or fails to function to disarm the security system and start your vehicle.

1. Use your key to enter the vehicle. The alarm will sound after the door is opened.
2. Insert your key into the ignition and turn it to the ON position.
3. Press the override/programming button secured to the remote start wire harness above the driver's kick panel. The vehicle alarm will stop sounding and the vehicle will be able to be started with the key.

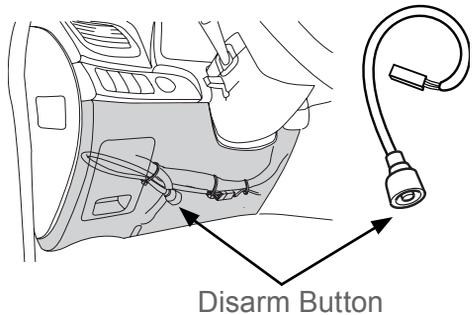

## Changing the Remote Control Transmitter Batteries

The (2) 3-volt lithium batteries (Model CR2016) supplied in your remote control transmitter should last approximately three years, depending on usage. When the batteries begin to weaken, you will notice a decrease in range or the distance from the vehicle that your remote control will operate.

**Follow the instructions below to change the remote control batteries.**

1. Insert the edge of a coin into the slot on the bottom of the remote control. Twist the coin to pry the remote control halves apart.
2. Remove the old batteries and replace with new ones. Be sure to observe the (+) and (-) sign when inserting the new batteries.
3. Carefully snap the case halves back together, then test the remote control.



Recycle or dispose of the old batteries according to your local laws or regulations.