

INSTALLATION GUIDE FOR YOUR NEW ACCENT HOOD GUARD

Part# U8240-1E000


PARTS LIST:

- 1 Hood Guard
- 1 Instruction Sheet
- 6 Large Bumpon PFBB1
- 4 Anti Abrasion Tape PFG2


TOOLS REQUIRED:

- Phillips Screwdriver


PFC4 (INSTALLED CLIP) PATENT PENDING

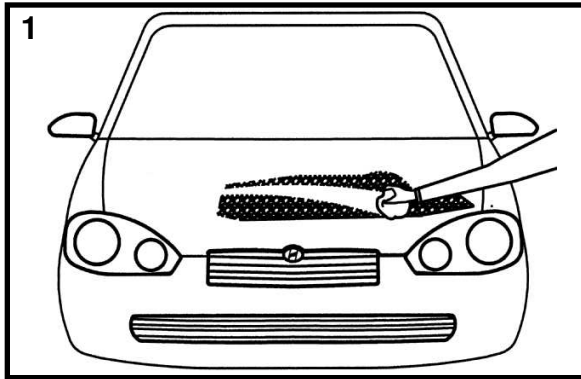


1. Ensure all surfaces are clean and dry before installing the hood guard.

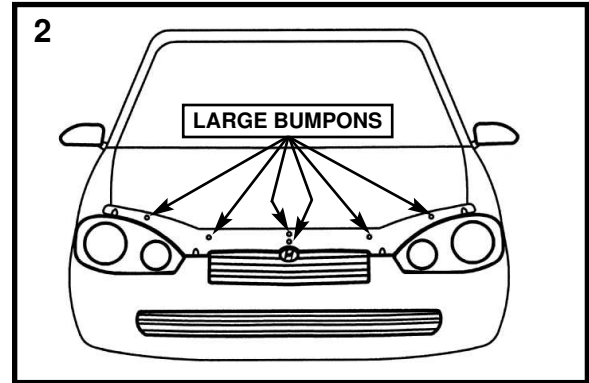


2. Carefully place the hood guard on top of the hood. Using the Yellow dots as a placement guide, peel the backing off the bumpons and center and attach them to the vehicle.

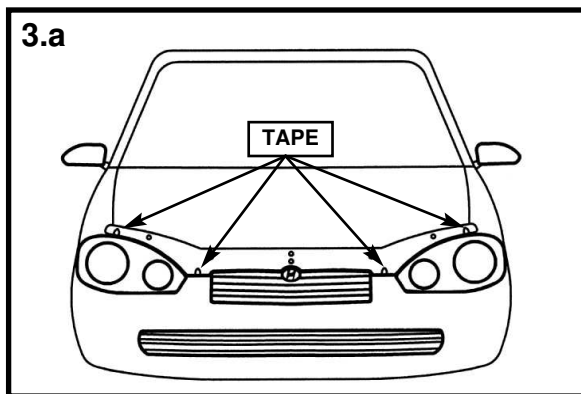

3a. Using the hood guard as a guide, place the anti-abrasion tape on the hood as illustrated.

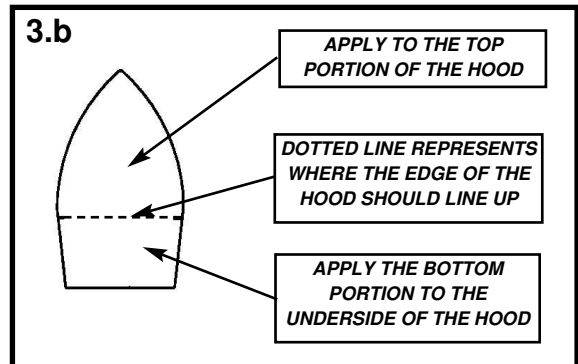

3b. Place the tape on the hood, so that it will protect the hood underneath the clips.

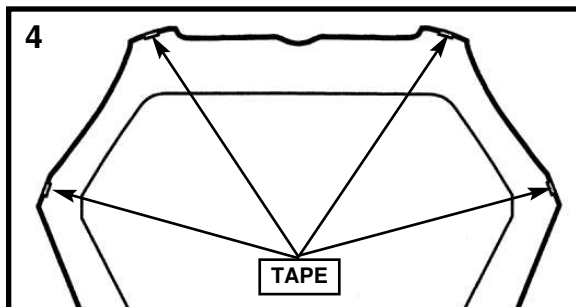

4. Slide the hood guard on the hood. Ensure that the clips are directly over the tape, then proceed to tighten all screws.

CAUTION!
Do not use automatic car washes with your Hood Guard.