



# Sunroof Deflector - HYUNDAI ELANTRA -




Contents:	DESCRIPTION	QTY	TOOLS REQUIRED:
	Sunroof Deflector	1	- Phillips Screwdriver
	Instruction Sheet	1	
	Protective Tape (PFG5)	2	
	Washer (PFW4)	2	
	Screw (PFS21)	2	
	Metal "J" Brackets (PFSD2)	2	

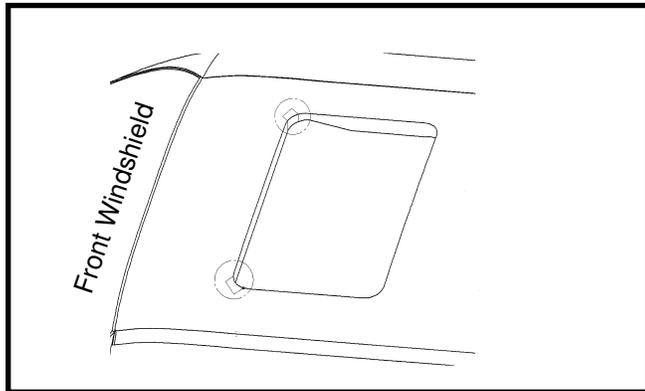

1. Open sunroof. Ensure all surfaces are clean and dry before applying the tape. Wrap anti-abrasion tape around the front edge of the sunroof opening.

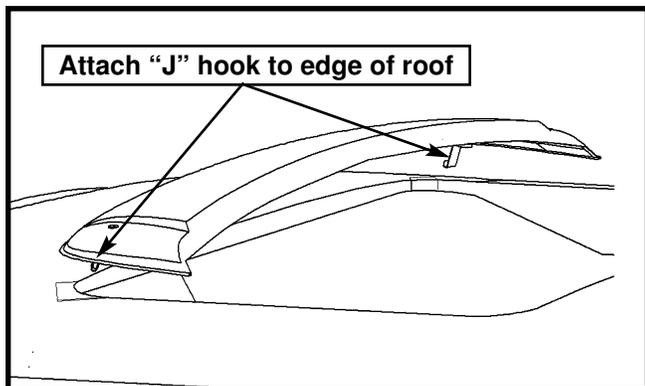


3. Line up the J hooks to the front edge of the sunroof.

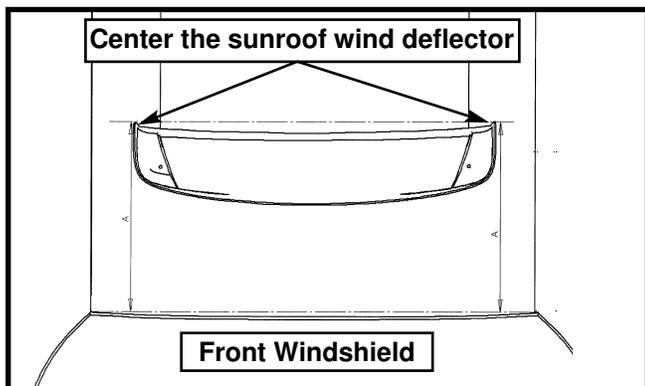


5. Center the wind deflector to ensure proper overhang as shown in the illustration.

## ATTENTION!


- Excessive downward pressure on the Sunroof Deflector may cause damage.
- Do not use automatic car washes with your Sunroof Deflector.
- Periodically check your Sunroof Deflector attachment points for security.
- Hyundai nor the manufacturer is not liable for damage incurred from improper installation.
- Do not use ammonia based cleaners on your Sunroof Deflector.

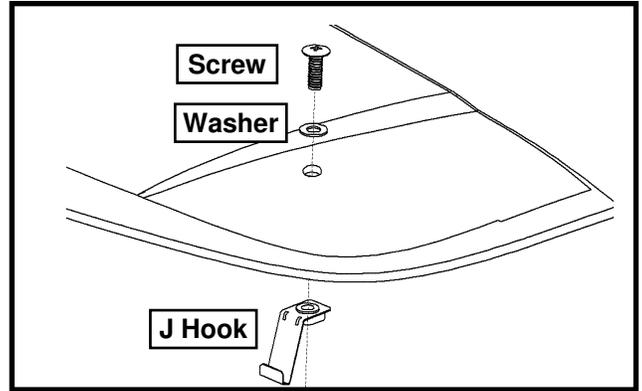

2. To start assembly, thread the screw through the washer and wind deflector then turn one thread through the "J" hook to have a loose assembly.

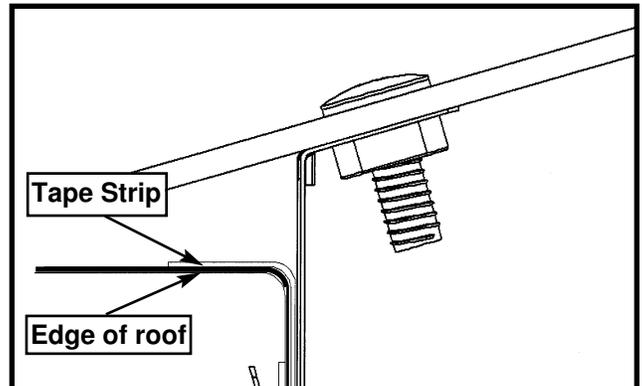

4. Position and attach the bottom edge of the hook to catch the edge of the roof opening.

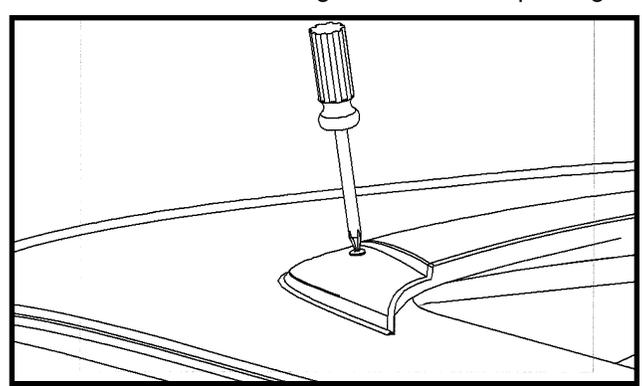

6. Tighten the screws securely with a screwdriver. Do not over tighten.